




Model: BR DIGITAL
DIGITAL RGB COOLING FAN

安裝指南
INSTALLATION GUIDE

防震墊安裝
ANTI-VIBRATION PAD INSTALLATION

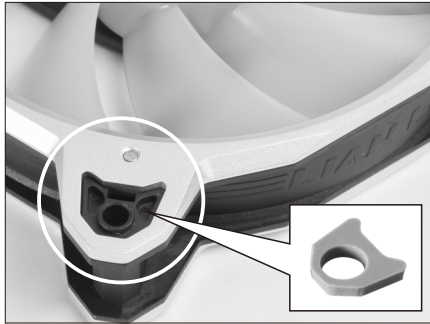


PWM 風扇接頭
PWM_FAN HEADER

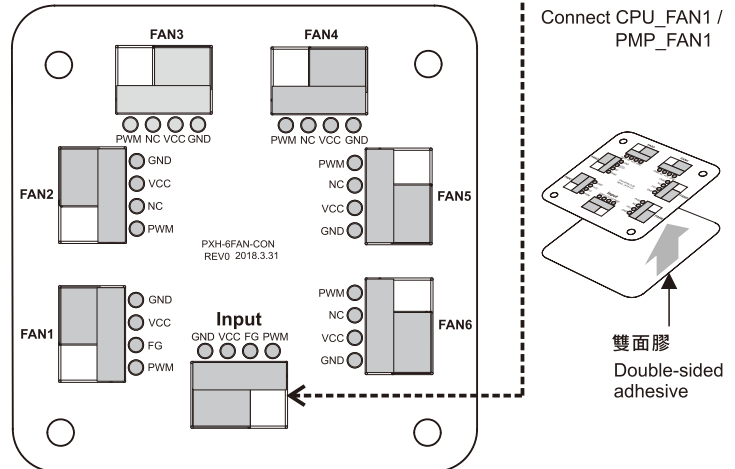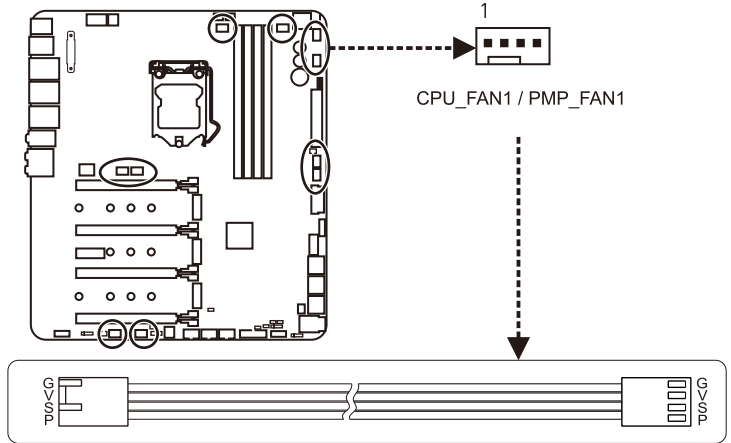


主板 SYNC MOTHERBOARD SYNC

主板 5V ADDRESS LED 接頭
MOTHERBOARD 5V ADDRESS LED HEADER

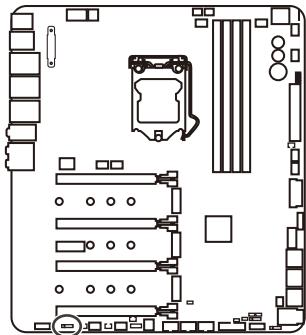

 1 ADDRESS LED 接頭 ADDRESS LED header			
1	+5V	2	Data
3	No Pin	4	Ground

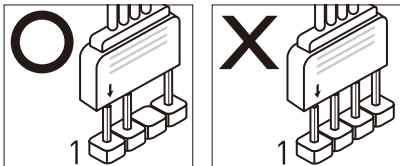


ADDRESS LED 接頭
ADDRESS LED header

1 VCC
2 DI
4 GND



警告: 請不要連接錯誤類型的LED接頭，
如果連接到12V接口，將造成永久損壞。

Warning: Do not connect the wrong type of
LED connector. If it is connected to the 12 V
connector, it will cause damage.

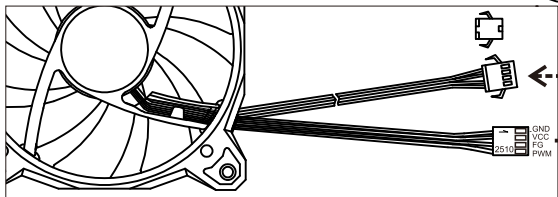


連接 PWM 接頭
Connect PWM header

支援主板軟件 CONTROLLER BY SOFTWARE



連接3按鈕控制器 CONNECT 3 BUTTON CONTROLLER

控制器
Controller

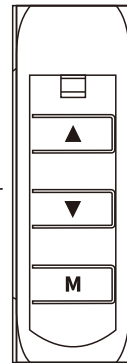


線材-1 Cable-1



接在電源供應器 SATA 15-P
Connect PSU SATA 15-P


連接 LED 燈條

CONNECT WITH LED STRIPS

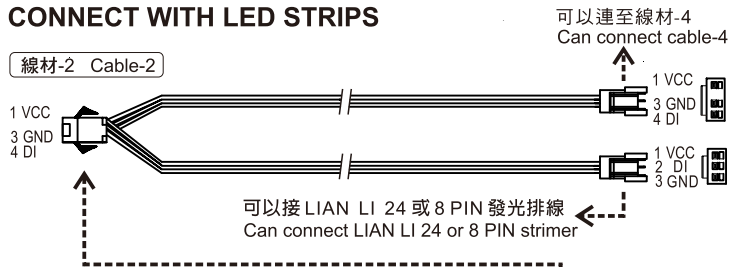

連接3按鈕控制器


CONNECT 3 BUTTON CONTROLLER

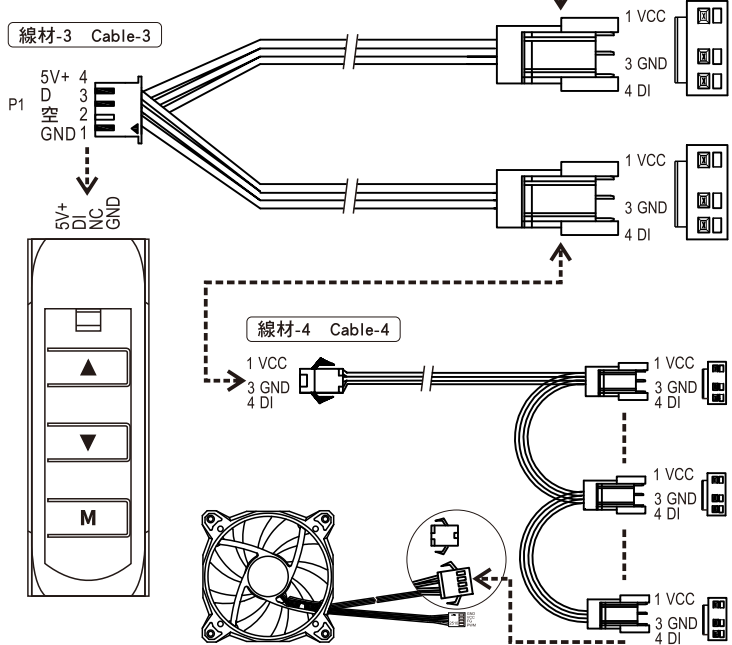

幻彩 RGB 控制板按鍵功能定義

按鍵操作說明

1. 本控制器共3個按鍵 ▲ ▼ M，1個指示燈。
2. M 鍵可切換燈光模式及速度模式，▲ ▼ 可選擇燈光或調整速度。
3. 接上電源或開機後，預設彩虹旋轉模式，指示燈亮綠燈（燈光模式），此時按 ▲ ▼ 可選擇燈光。按 M 鍵切換到速度模式。
4. 速度模式下，指示燈亮藍燈，此時按 ▲ ▼ 可調整演示速度。按 M 鍵切換到燈光模式。
5. 任意模式下長按三秒 ▼ 鍵會回歸預設的彩虹旋轉模式，任意模式下長按3秒 ▲，為自動演示。
6. 任意模式下長按三秒 M 鍵會關機，關機狀態下 M 鍵按一下可開機並回到關機前的狀態。
7. 關機或拔掉電源（斷電）會記憶目前燈光、速度狀態，開機後回到原狀態。

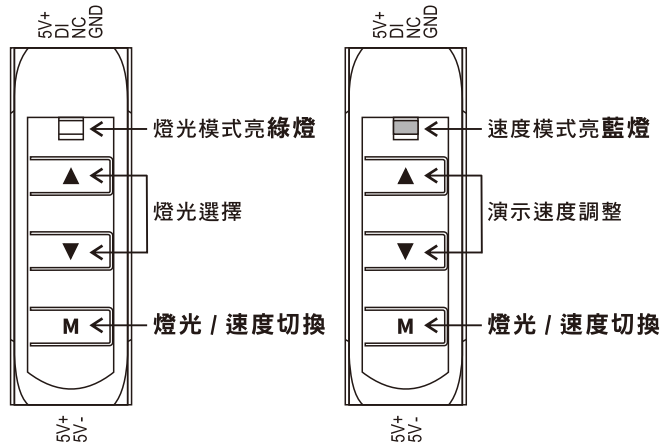


燈型1-10 (預設)：幻彩模式 (此時按 ▲ ▼ 可調整速度)

燈型11-16 (預設)：單色燈 (此時按 ▲ ▼ 可調整亮度)

RGB CONTROL PANEL BUTTONS

Operation Instruction

1. This control panel includes 3 buttons ▲ ▼ M and 1 indicator light.
2. Press **M** to switch the lighting mode and the speed, use ▲ ▼ to choose the lighting or to adjust the speed.
3. After the power is turned on, the rainbow rotation mode is preset and the indicator light is green. At this time, press ▲ ▼ to select the lighting mode, and press **M** to change the speed.
4. In the speed mode, the indicator light is blue, then press▲ ▼ to adjust the speed, and press **M** to switch to the lamp mode.
5. Press ▼ for 3 seconds in any mode to return to preset. Press ▲ for 3 seconds to display presentation automatically.
6. Press **M** in and mode to turn off, and press it again to turn it on and return to its former status.
7. Shut down or unplug the power to remember the current lamp type and speed status. It will return to the original state after booting.

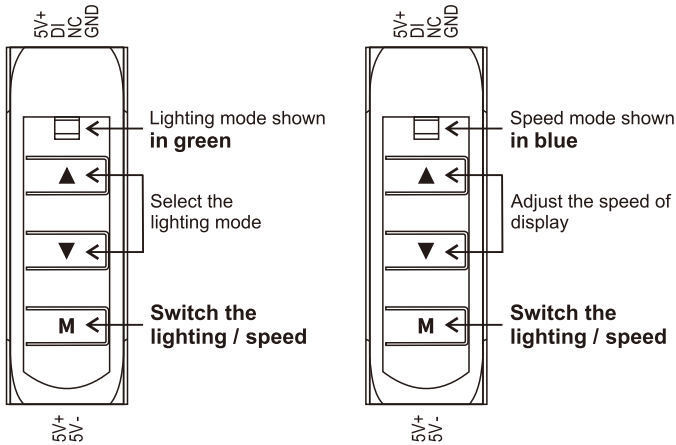

Lighting 1~10 (preset): Symphony color mode (press ▲ ▼ to adjust the speed)
 Lighting 11~16 (preset): Monochrome light (press ▲ ▼ to adjust the brightness)

燈型模式一覽表

1. 彩虹	9. 半弧雙色 (藍紅)
2. 雙弧線循環變色	10. 半弧雙色 (藍、淺綠)
3. 弧線交替變色	11. 恆亮藍光
4. 弧線左右環繞變色	12. 恆亮綠光
5. 弧線半斷交替變色	13. 恆亮紫光
6. 弧線雙色流光	14. 恆亮紅光
7. 流光環繞變色	15. 恆亮淺黃
8. 半弧雙色 (綠紅)	16. 恆亮黃綠光

SWITCH THE LIGHTING MODE LIST

1. Rainbow	9. Bicolor Half Arc (Blue & Red)
2. Cyclic Colors of Double Arcs	10. Bicolor Half Arc (Blue & Light Green)
3. Alternate Colors of Arc	11. Static Blue
4. Cyclic Colors of Arc (Left-Right)	12. Static Green
5. Sporadic Alternate Colors of Arc	13. Static Purple
6. Bicolor Arc Neon	14. Static Red
7. Surround Changing Neon Colors	15. Static Light Yellow
8. Bicolor Half Arc (Green & Red)	16. Static Yellow Green